



Operating and safety instructions for Air staple gun

SAFETY FIRST:

If you are collecting the equipment for someone else please make sure this sheet is given to the equipment user to read. In accordance with Health and Safety in Employment Act requirements, this sheet should be given to the site supervisor if the equipment is being hired for use at a commercial worksite so that the information is available to all users.

Required Safety Equipment







Hard Hat







Gloves

Pre Start Checks and Safety

! Ensure correct sized nails/staples for the gun and job

! Ensure oil lubricator is full (if applicable)

! Ensure compressor is correct size to operate the gun

! Ensure correct air pressure for gun

! Use a compressor (do not use a bottled pressure system to operate the gun)

! Check worksite for hazards etc

! Do not adjust gun unless disconnected

from air supply

! Check safety mechanism is operating correctly

! Do not tamper with the safety mechanism or other mechanical parts

! Do not engage in horseplay as the gun can inflict fatal injuries

! Ensure no other person is in direct firing line with the gun unit

! Ensure there are no hidden cables, pipes

! Check air hose for good condition

When Operating

Set up compressor (as per compressor instructions)

Load nails/staples into gun Firmly hold gun against timber to be nailed/stapled Pull trigger

Stopping and After Use

Release trigger Disconnect air line Remove all nails/staples from unit Store gun away safely